



警告!

燃气喷轨的A接头必须与燃气ECU油嘴线的蓝色线相对应，燃气ECU油嘴线切断的是喷油嘴的负极线

THE CONNECTOR OF THE GAS INJECTOR A MUST CORRESPOND TO THE BLUE WIRE OF THE PETROL CUT-INJECTOR CABLE. THE WIRES TO INTERRUPT ARE INJECTORS NEGATIVE WIRES.



CHANGE OVER SWITCH
转换开关

